

## V. Proper Care Instructions



Don't expose scale to moisture



Don't drop or mistreat the scale.




Don't overload the scale. This will permanently damage it!




Don't leave weight on the scale when not in use.



Replace battery when the scale displays “” or shows “LO” on the display when powered up



American Weigh Scales, Inc.

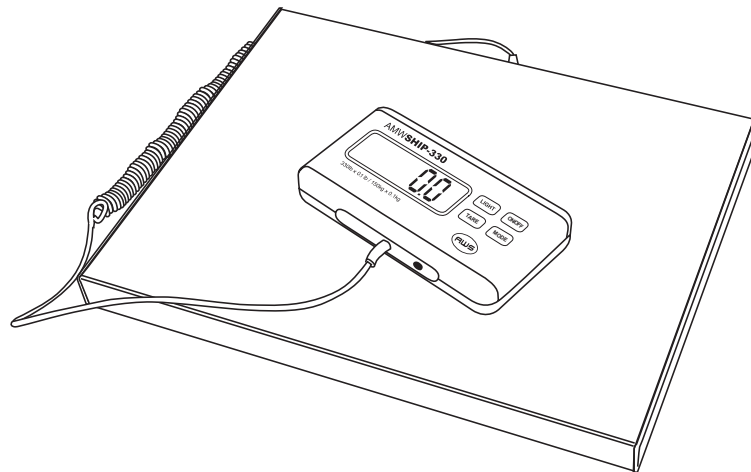

---

**AMWSHIP-330**  
**330 x 0.1lb / 150 x 0.05kg**

*User Manual*

## I. Operation

*For the best results, only operate your scale on a flat and stable surface.*

1. Insert the 4 AA batteries into the battery compartment, or plug the AC-Adapter into an available wall outlet and plug the opposite end into the indicator.
2. Press the “ON/OFF” key to turn the scale on.
3. Wait until the display shows “0.0” (zero) before placing any weight on the scale.
4. Carefully place the item(s) to be weighed onto the weighing platform.
5. After a few seconds, the weight should stabilize and you can now get your weight reading from the LCD display.
6. Using the “MODE” key you can switch between weighing units (lb, oz, kg)

## II. Tare Weighing

*The Tare button resets the display to zero when weight is on the scale, allowing you to subtract the weight of a container.*

1. Place the container you wish to use on the platform.
2. When the readout stabilizes press the TARE key once.
3. The display will reset to zero allowing you to now add items to the container and obtain the weight of just the contents (net weight).

## III. Backlight.

This scale has a backlit display with backlight on/off button.

1. The backlight automatically turns on when the scale turns on.
2. To turn it off, press the LIGHT button on the scales indicator.

## IV. Troubleshooting

### H - Overload

-E or no display - Readjust or replace the batteries.

Model	AMWSHIP-330
Capacity	330lb / 150kg / 5280oz
Resolution	0.1lb / 0.05kg / 1oz
Weighing Units	pounds (lb), kilograms (kg), ounce (oz)
Display	Blue Backlit LCD (with LIGHT button)
Platform Dimensions (inches)	11.25 x 11.75 x 1.37
Power	4 x AA Batteries or AC-Adapter (both included)
Weight	